




FUSION

STONE


DRY-STACK TECHNICAL APPLICATION GUIDE

DRY-STACK TECHNICAL APPLICATION GUIDE


Typical Cross Section of Veneer Mounting System

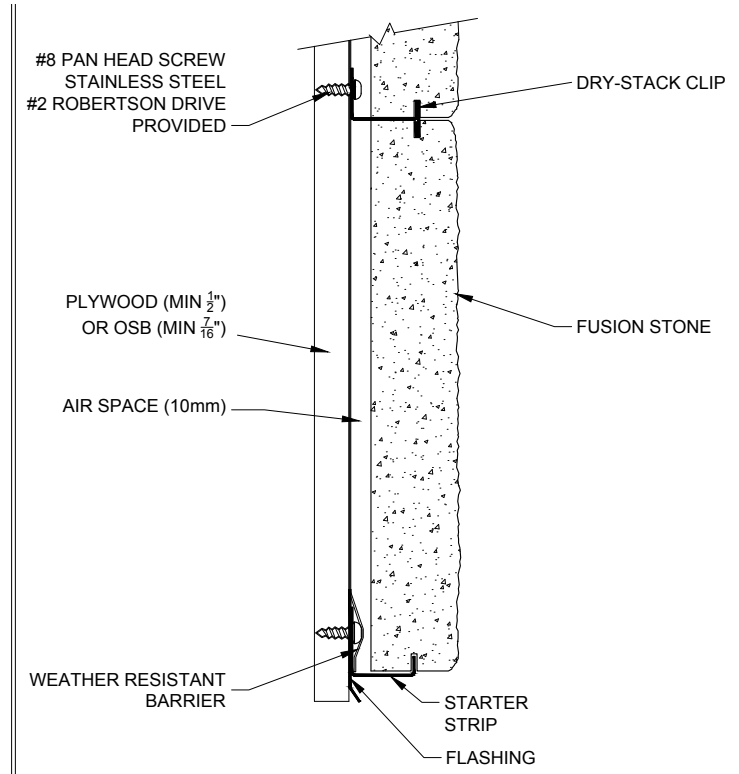


Typical Cross Section of Window / Door Sill

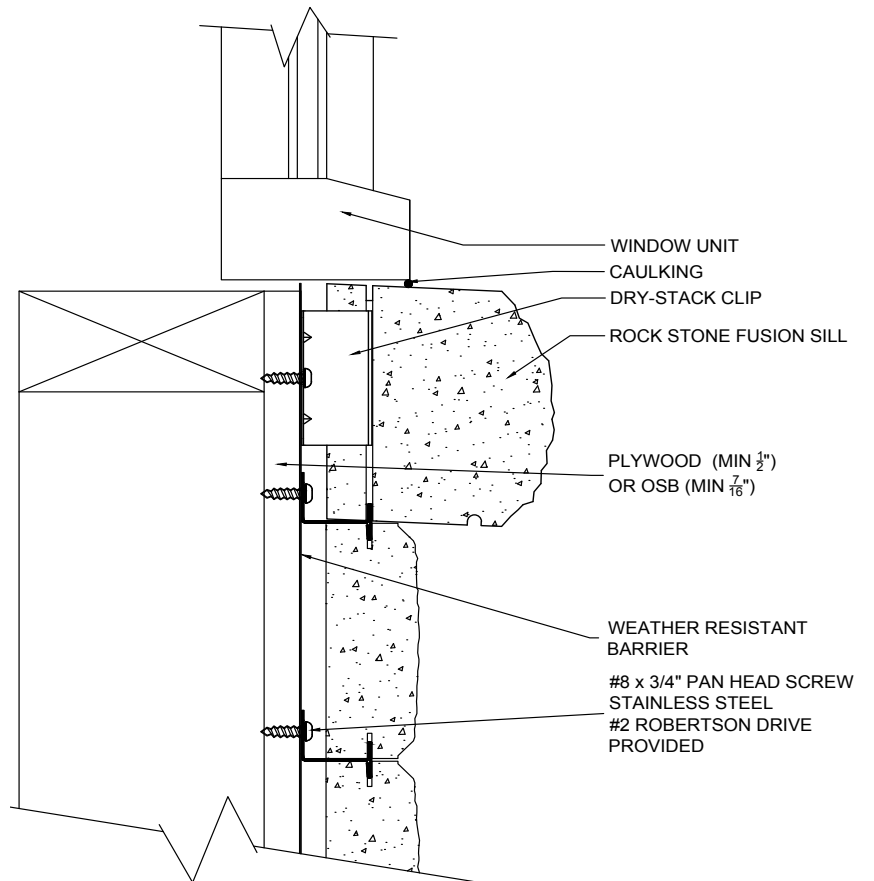


Typical Cross Section
Type 1 Sheathing
Flush w/ Foundation

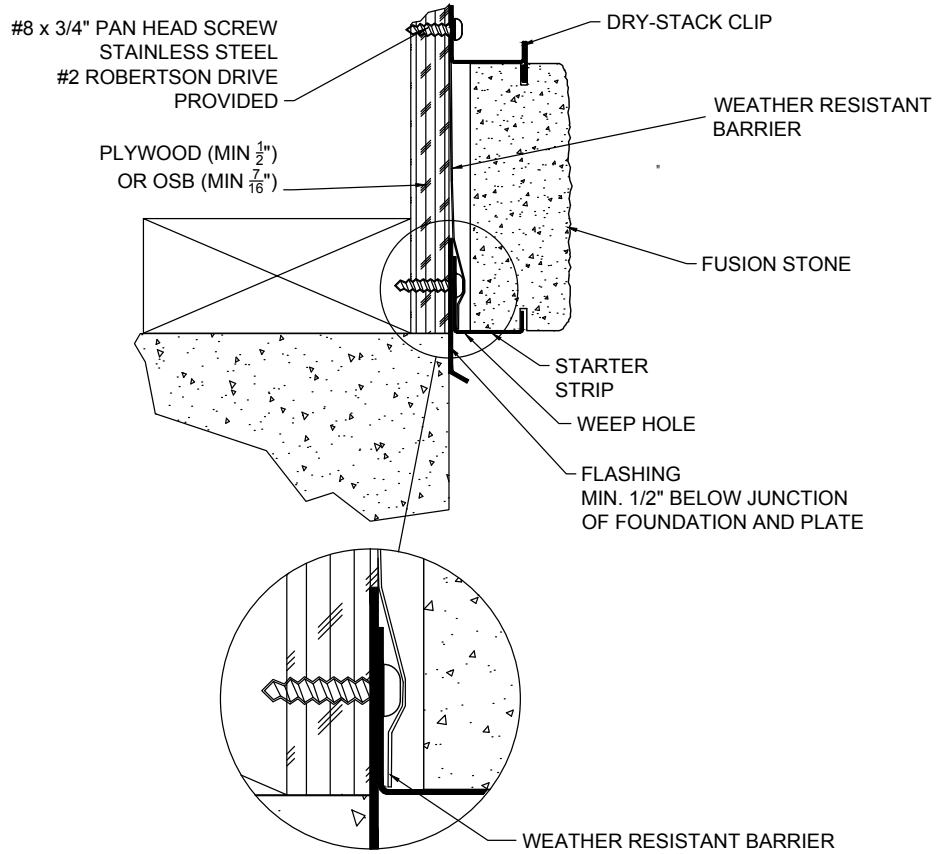


Typical Cross Section
of Veneer Mounting System

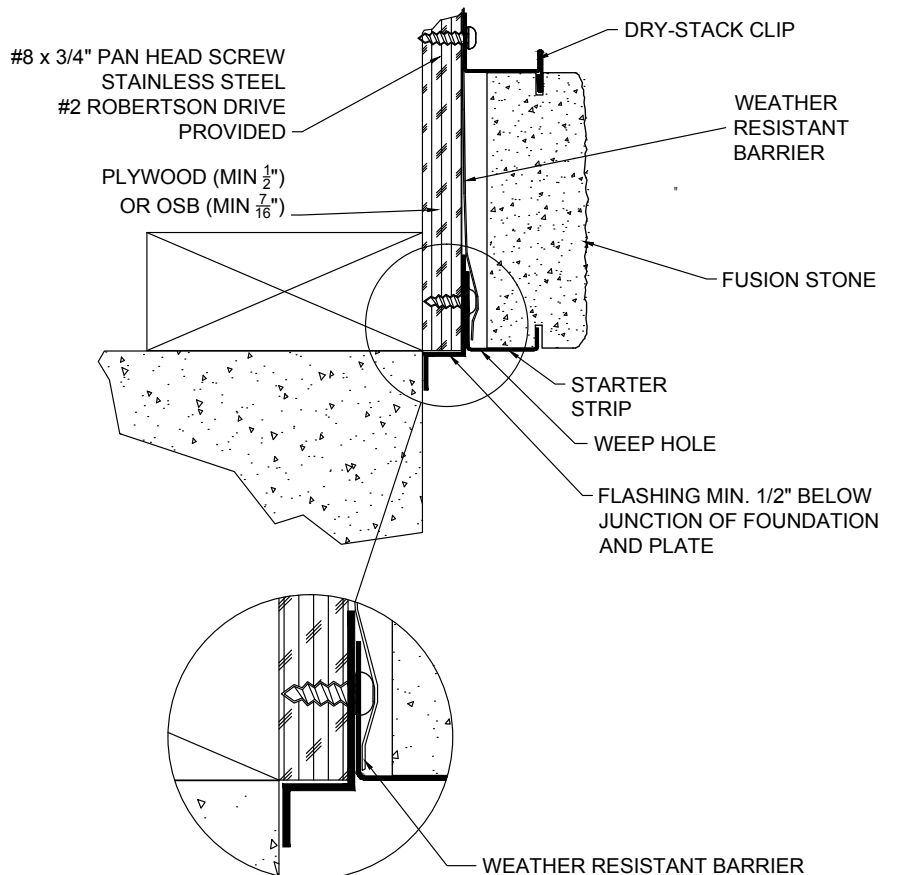


Typical Cross Section
Window / Door Header

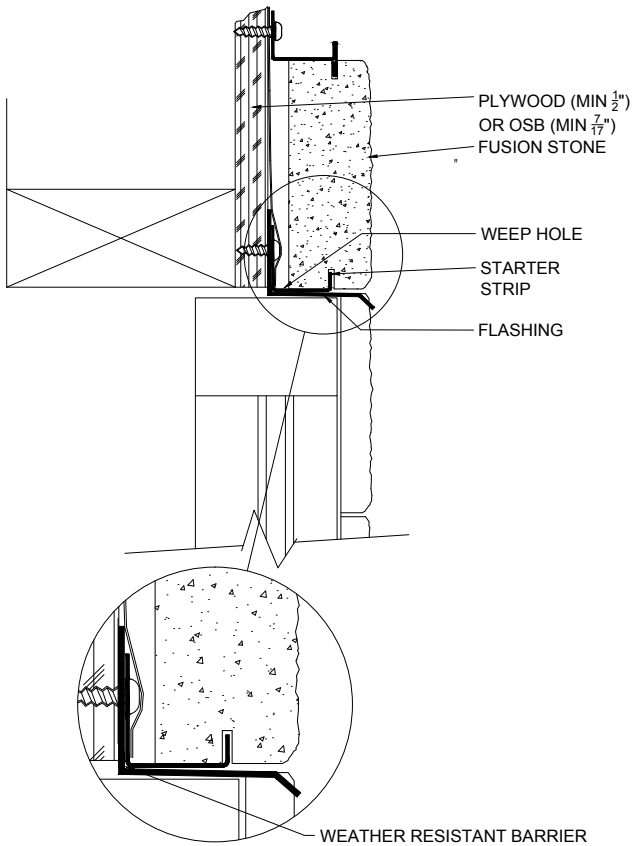


Typical Cross Section
Wainscot Sill Transition to Siding

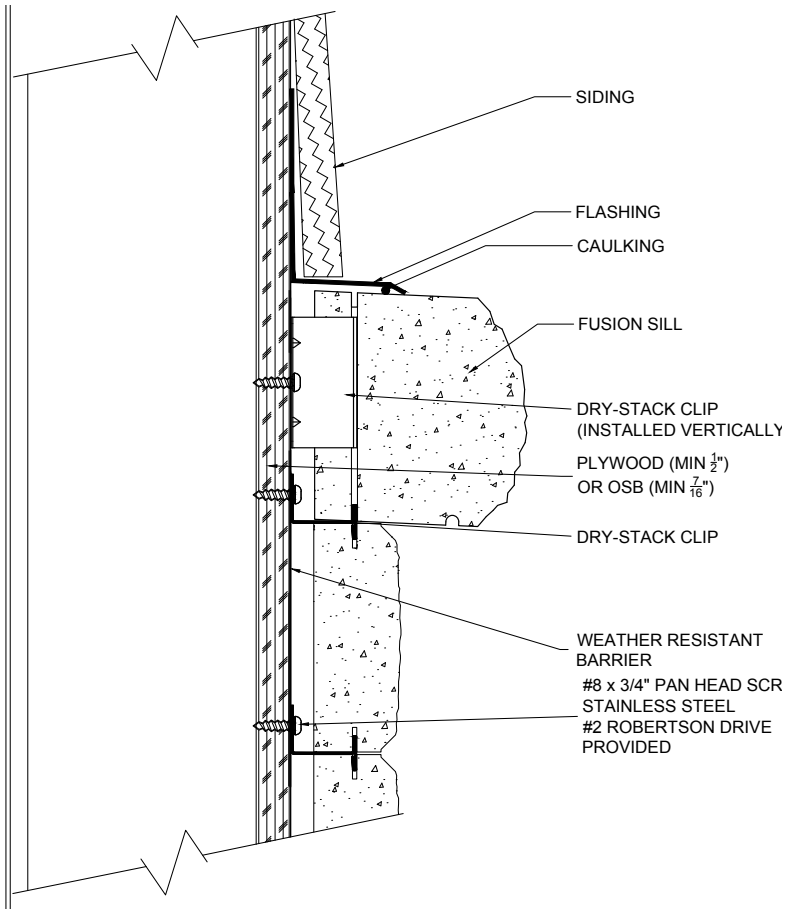


Typical Cross Section
Wainscot Sill Transition to Stucco

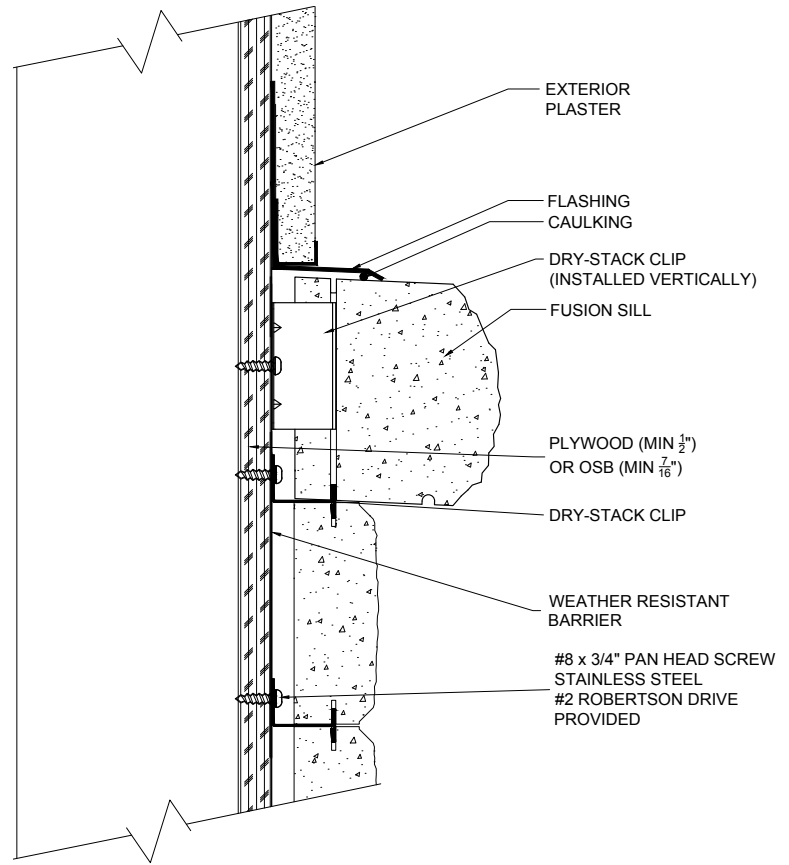


Typical Cross Section
Transition Roof to Wall

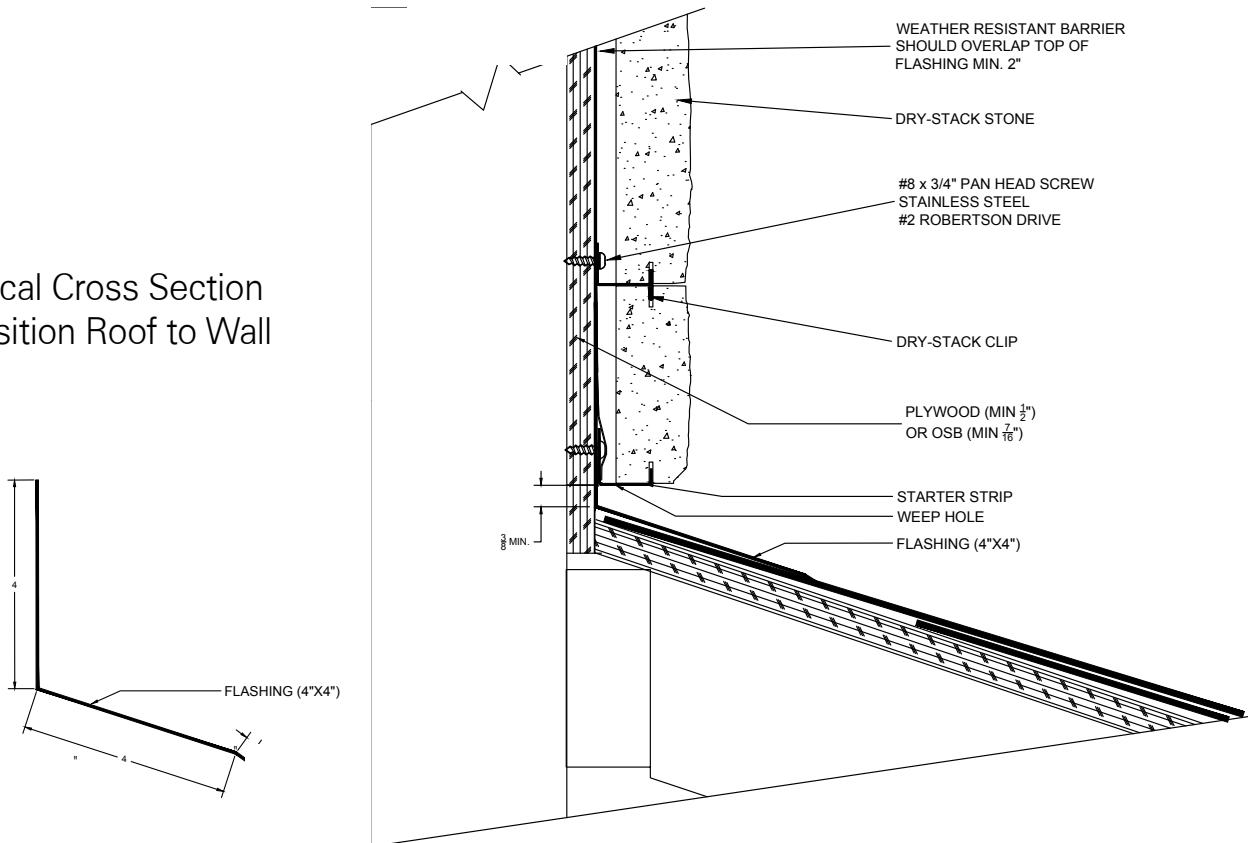


Typical Cross Section
Concrete Block / Poured Cap

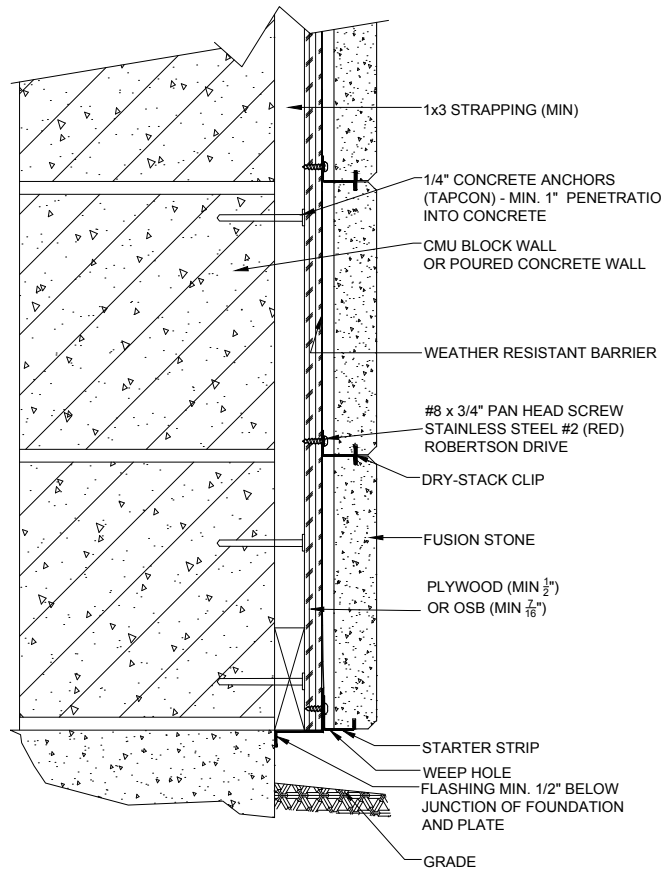

Typical Cross Section
Wood Stud Wall
Section with Rigid Insulation

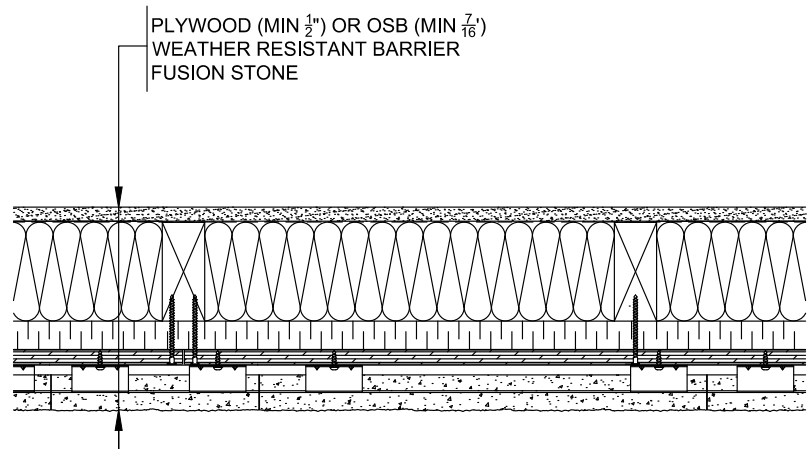


PLAN VIEW

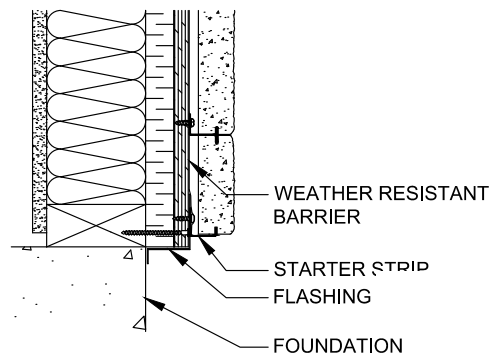


SECTION AT STARTER STRIP

Typical Cross Section
ICF Wall - Plan View

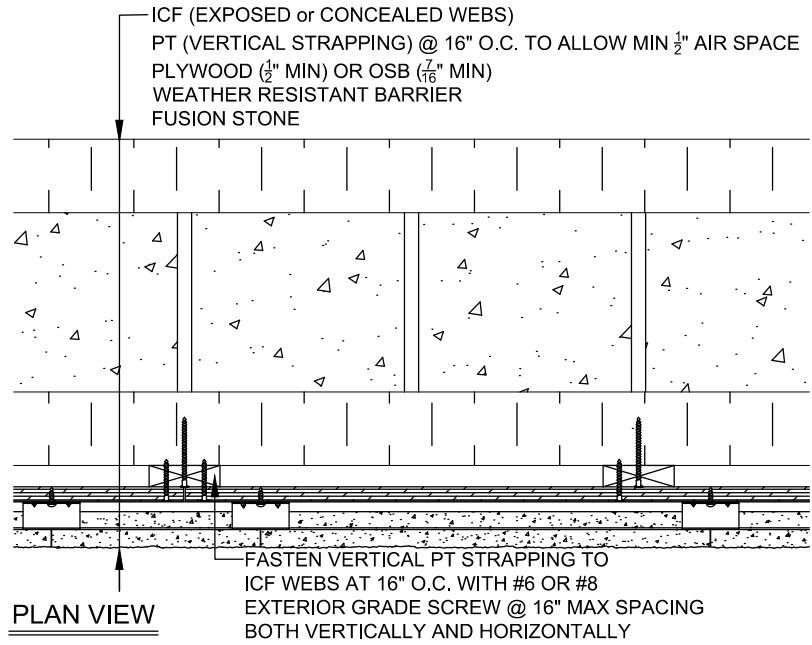

Typical Cross Section
ICF Wall - Section View at
Starter Strip

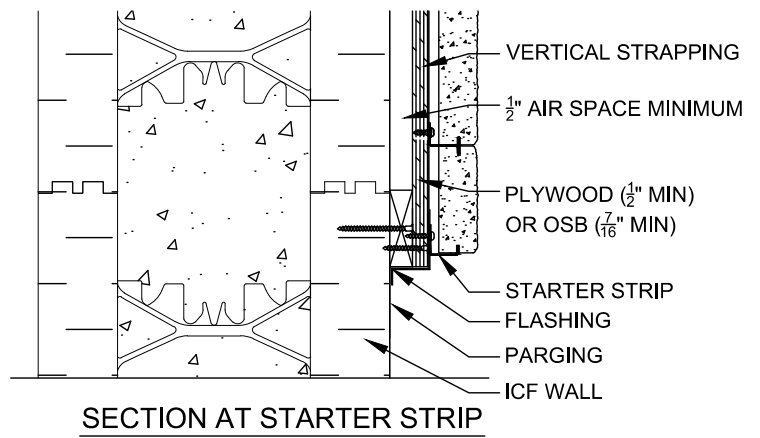



Proudly manufactured in Canada by Shouldice Designer Stone

281227 Shouldice Block Road, Shallow Lake, Ontario, N0H 2K0 CANADA
800.265.3174 | fusion@shouldice.ca

CCMC# 14008-R